

**BAYMAK Ukraine LLC.**

адрес: Украина, 50000, Днепропетровская обл.,
г. Кривой Рог, пр. Карла Маркса, 1, офис 580
тел.: +38(068)9479000, +38(093)8964626
тел./факс: +38(056)4629007
е-mail: info@baymak.com.ua
web: www.baymak.com.ua

KOMATSU		hidrosil
Каталожный номер	Наименование	
KOMATSU DX85EX-15 RIPPER 707-00-0H060		
707-11-13740	Cylinder as	
721-58-70230	Rod as	
707-36-13240	Piston	
707-29-13630	Head	
154-63-42320	Bearing Sleeve	
154-63-42320	Bearing Sleeve	
	Stop	
	Stop	
707-67-52020	Nut	
	Bolt	
707-99-43710	Kit Seal	
KOMATSU PC 200-6 BOOM 205-63-X2502		
205-63-53342	Cylinder as	
205-63-53521	Rod as	
707-36-12411	Piston	
707-27-12620	Head	
707-76-80010	Bearing Sleeve	
205-70-71360	Bearing Sleeve	
707-71-60901	Stop	
	Stop	
07165-15860	Nut	
01010-51035	Bolt	
	Kit Seal	
KOMATSU PC 200-6 ARM 205-63-X3122		
205-63-61142	Cylinder as	
707-58-95190	Rod as	
707-36-13731	Piston	
707-27-13961	Head	
707-76-80010	Bearing Sleeve	
707-76-80010	Bearing Sleeve	
707-71-61040	Stop	
707-71-32770	Collar	
	Nut	
01010-81875	Bolt	

	Kit Seal
KOMATSU PC 200-6 BUCKET 20-63-X9040	
205-63-71141	Cylinder as
205-63-71121	Rod as
707-36-11661	Piston
707-27-11981	Head
707-76-70110	Bearing Sleeve
707-76-70120	Bearing Sleeve
	Stop
	Nut
01010-81670	Bolt
	Kit Seal
KOMATSU PC 200-8 ARM 707-01-0J250	
707-13-13870	Cylinder as
707-58-95270	Rod as
707-36-13771	Piston
707-27-13850	Head
707-76-80010	Bearing Sleeve
707-76-80010	Bearing Sleeve
707-71-70010	Stop
707-71-34980	Collar
	Nut
01010-81875	Bolt
707-98-48610	Kit Seal
KOMATSU PC 200-8 BUCKET 707-01-0J280	
707-13-11740	Cylinder as
707-58-80870	Rod as
707-36-11880	Piston
707-27-11870	Head
707-76-70110	Bearing Sleeve
707-76-70120	Bearing Sleeve
	Stop
	Nut
01010-81670	Bolt
	Kit Seal
KOMATSU PC 220-7 BOOM 707-01-XZ880	
707-13-13470	Cylinder as
707-58-90930	Rod as
707-36-13780	Piston
707-27-13921	Head
707-76-80431	Bearing Sleeve
707-76-8434	Bearing Sleeve
707-71-60970	Stop
	Stop
	Nut
01010-81670	Bolt

707-99-47790	Kit Seal
KOMATSU PC 220-7 BUCKET 707-01-0A420	
707-13-14570	Cylinder as
707-58-10710	Rod as
707-36-14650	Piston
707-27-14930	Head
707-76-80470	Bearing Sleeve
707-76-80480	Bearing Sleeve
	Stop
	Nut
01010-81875	Bolt
707-99-58060	Kit Seal
KOMATSU PC 220-7 ARM 707-01-0A371	
707-13-14550	Cylinder as
707-58-10681	Rod as
707-36-14650	Piston
707-27-14930	Head
707-76-80470	Bearing Sleeve
707-76-80470	Bearing Sleeve
707-71-61080	Stop
707-71-32780	Collar
	Nut
01435-01040	Bolt
707-99-58070	Kit Seal
KOMATSU PC 220-8 ARM 707-01-0J840	
707-13-14820	Cylinder as
721-58-10070	Rod as
707-36-14650	Piston
707-27-14690	Head
707-76-80010	Bearing Sleeve
707-76-80010	Bearing Sleeve
707-71-71020	Stop
707-71-34990	Collar
	Nut
01010-81875	Bolt
707-98-58240	Kit Seal
KOMATSU PC 220-8 BUCKET 707-01-0J870	
707-13-13880	Cylinder as
707-58-90E60	Rod as
707-36-13780	Piston
707-27-13750	Head
707-76-80010	Bearing Sleeve
707-76-80020	Bearing Sleeve
	Stop
	Nut
01010-81875	Bolt

707-98-47720	Kit Seal
KOMATSU PC 300-5 ARM 207-63-X2120	
207-63-02120	Cylinder as
207-63-63120	Rod as
707-36-16320	Piston
707-27-16620	Head
707-76-10130	Bearing Sleeve
707-76-10130	Bearing Sleeve
707-71-61100	Stop
707-71-31191	Collar
	Nut
01010-82085	Bolt
	Kit Seal
KOMATSU PC 300-6 BUCKET 207-63-X9040	
270-63-02531	Cylinder as
207-63-73320	Rod as
707-36-14410	Piston
707-27-14930	Head
707-76-90130	Bearing Sleeve
270-63-76170	Bearing Sleeve
	Stop
	Nut
01010-81875	Bolt
707-99-58370	Kit Seal
KOMATSU PC 300-6 BOOM 207-63-X9010	
207-63-02501	Cylinder as
207-63-53520	Rod as
707-36-14410	Piston
707-27-14930	Head
707-76-90390	Bearing Sleeve
707-76-10130	Bearing Sleeve
707-71-61060	Stop
	Stop
	Nut
01010-81875	Bolt
707-99-58360	Kit Seal
KOMATSU PC 300-7 , 300-8 ARM 707-01-XX0202	
707-01-0C600	Cylinder as
707-58-11360	Rod as
707-36-16580	Piston
707-27-16920	Head
707-76-10130	Bearing Sleeve
707-76-10130	Bearing Sleeve
707-71-61130	Stop
707-71-32800	Collar
	Nut

01010-82085	Bolt
707-99-67090	Kit Seal
KOMATSU PC 300-7 BUCKET 707-01-0H130	
707-13-14591	Cylinder as
721-58-10020	Rod as
707-36-14650	Piston
721-27-14020	Head
707-76-90130	Bearing Sleeve
207-70-73240	Bearing Sleeve
	Stop
	Nut
01010-81885	Bolt
707-99-58095	Kit Seal
KOMATSU PC 300-7 , 300-8 BOOM 707-01-0A430	
707-13-14580	Cylinder as
707-58-10720	Rod as
707-36-14650	Piston
707-27-14930	Head
707-76-90490	Bearing Sleeve
707-76-10290	Bearing Sleeve
707-71-61090	Stop
	Stop
	Nut
01010-81875	Bolt
	Kit Seal
KOMATSU PC 300-8 BUCKET 707-01-0H781	
707-13-15261	Cylinder as
707-58-11370	Rod as
707-36-15260	Piston
707-27-15650	Head
707-76-90490	Bearing Sleeve
207-63-76170	Bearing Sleeve
	Stop
	Nut
01010-82085	Bolt
707-99-59610	Kit Seal
KOMATSU PC 350-7 ARM 707-01-XZ982	
707-01-0A452	Cylinder as
707-58-11360	Rod as
707-36-16580	Piston
707-27-16571	Head
707-76-10290	Bearing Sleeve
707-76-10290	Bearing Sleeve
707-71-61130	Stop
707-71-32800	Collar
	Nut

01010-82085	Bolt
707-99-72300	Kit Seal
KOMATSU PC 350-8 BUCKET 707-01-0C621	
707-13-15261	Cylinder as
707-58-11370	Rod as
707-36-15260	Piston
707-27-15611	Head
707-76-90130	Bearing Sleeve
207-63-76170	Bearing Sleeve
	Stop
	Nut
01010-82085	Bolt
707-99-59610	Kit Seal
KOMATSU WA 380-3 TILT 707-01-03290	
707-01-03290	Cylinder as
707-58-90390	Rod as
707-36-18400	Piston
	Head
707-76-11010	Bearing Sleeve
707-76-11010	Bearing Sleeve
	Stop
	Nut
01010-81865	Bolt
707-99-64410	Kit Seal
KOMATSU PC 400-6 ARM 208-63-X9031	
208-63-02522	Cylinder as
208-63-63721	Rod as
707-36-18520	Piston
707-27-18960	Head
707-76-11130	Bearing Sleeve
707-76-11130	Bearing Sleeve
707-71-61320	Stop
707-71-32900	Collar
	Nut
01011-82400	Bolt
707-99-68560	Kit Seal
KOMATSU PC 400-6 BOOM 208-63-X9010	
208-63-02501	Cylinder as
208-63-53520	Rod as
707-36-16380	Piston
707-27-16920	Head
707-76-10270	Bearing Sleeve
707-76-11130	Bearing Sleeve
707-71-61111	Stop
	Stop
	Nut

01010-82085	Bolt
707-99-67300	Kit Seal
KOMATSU PC 400-6 BUCKET 208-63-X2130	
208-63-02130	Cylinder as
208-63-73120	Rod as
707-36-16320	Piston
707-27-16620	Head
707-76-10130	Bearing Sleeve
707-76-10140	Bearing Sleeve
	Stop
	Nut
101010-82085	Bolt
707-99-67010	Kit Seal
KOMATSU PC 400-7 BOOM 707-01-XU760	
707-01-0F670	Cylinder as
707-58-11490	Rod as
707-36-16580	Piston
707-27-16580	Head
707-76-10290	Bearing Sleeve
707-76-11220	Bearing Sleeve
707-71-61140	Stop
	Stop
	Nut
01010-82085	Bolt
707-99-67870	Kit Seal
KOMATSU PC 400-7 ARM 707-01-XU780	
707-01-0F690	Cylinder as
707-58-12530	Rod as
707-36-18520	Piston
707-27-18930	Head
707-76-11250	Bearing Sleeve
707-76-11250	Bearing Sleeve
707-71-61330	Stop
707-71-31690	Collar
	Nut
01011-82400	Bolt
707-99-68780	Kit Seal
KOMATSU PC 400-7 BUCKET 707-01-XU790	
707-01-0F700	Cylinder as
707-58-10930	Rod as
707-36-16580	Piston
707-27-16950	Head
707-76-10330	Bearing Sleeve
208-70-73510	Bearing Sleeve
	Stop
	Nut

01010-82085	Bolt
707-99-66240	Kit Seal
KOMATSU 420-3 TILT 424-63-H3020	
424-63-HOP06	Cylinder as
424-63-HOP02	Rod as
707-36-20400	Piston
424-63-HOP09	Head
707-76-11050	Bearing Sleeve
707-76-11050	Bearing Sleeve
	Stop
	Nut
01010-82075	Bolt
424-63-HOP11	Kit Seal
KOMATSU 420-3 BOOM 707-01-03081	
707-01-03081	Cylinder as
707-59-90222	Rod as
707-36-16410	Piston
	Head
707-76-95040	Bearing Sleeve
	Bearing Sleeve
	Stop
	Stop
	Nut
01010-81660	Bolt
707-99-64030	Kit Seal
KOMATSU 430-5 BOOM 707-01-0A890	
707-13-16661	Cylinder as
707-59-90040	Rod as
707-36-16540	Piston
707-27-16380	Head
707-76-95040	Bearing Sleeve
	Bearing Sleeve
	Stop
	Stop
	Nut
01010-81660	Bolt
707-99-64080	Kit Seal
KOMATSU 470-5 TILT 707-01-X7440	
707-13-20222	Cylinder as
707-58-10670	Rod as
707-36-20260	Piston
707-27-20830	Head
707-76-12110	Bearing Sleeve
707-76-12030	Bearing Sleeve
	Stop
	Nut

01010-82075	Bolt
707-99-73150	Kit Seal
KOMATSU 480-5 BOOM 707-01-X7450	
707-13-18251	Cylinder as
707-59-95050	Rod as
707-36-18610	Piston
707-27-18230	Head
707-76-11030	Bearing Sleeve
	Bearing Sleeve
	Stop
	Stop
	Nut
01010-81865	Bolt
	Kit Seal
KOMATSU 480-5 TILT 707-01-X7470	
707-13-22061	Cylinder as
707-58-12320	Rod as
707-36-22360	Piston
707-27-22040	Head
707-76-12140	Bearing Sleeve
707-76-12140	Bearing Sleeve
	Stop
	Nut
01010-82295	Bolt
707-99-75480	Kit Seal